

# CAR AIR PUMP

(Please read this manual in detail before use)

## Instruction for use

ATJ-1866



### WARNING

Children are not allowed to operate the machine alone.  
Do not use in direct sunlight or under high temperature & high pressure.  
Do not throw the machine into water ; and do not expose the machine to the rain when in use.  
Do not use continuously for more than 10 mins. Please turn off the machine for 30mins before next use.

Avoiding damaging property and burning the motor ,please follow above rules and instructions.


### NOTICE

- 1.To prevent electric shock, do not expose the machine to the rain . Store it indoor and stay away from fire.
- 2.It's normal that the machine gets a little hot when normal running.
- 3.In order to keep the machine in good condition, don't use it continuously for long time .

### PRODUCT PARAMETER

Model No.	ATJ-1866
Material	ABS
Product Size	185x95x195MM
Power	120W
Voltage	AC/DC

### PRODUCT DESCRIPTION

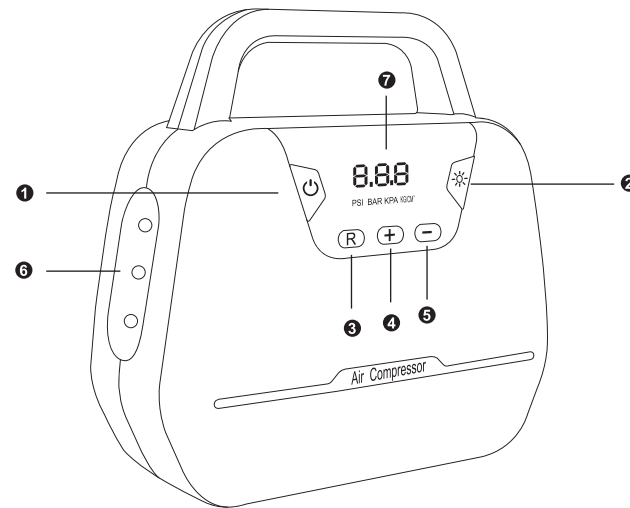

- ① On/Off Switch
- ② LED light switch
- ③ Unit change button
- ④ "+" button
- ⑤ "-" button
- ⑥ LED light
- ⑦ Pressure display

### INSTRUCTION----DC VOLTAGE


1. Start the car (ENGINE START STOP button)
2. Insert the cigarette lighter plug into cigarette lighter socket.
3. Connect the gas tube to the valve of tire.
4. Pre-set the pressure (Digital display shows 8.88)
5. Press the switch to start inflation (Power button)
6. FINISHED

### INSTRUCTION----AC VOLTAGE

1. Insert the AC plug into AC socket
2. Connect the gas tube to the valve of tire.
3. Pre-set the pressure (Digital display shows 8.88)
4. Press the switch to start inflation (Power button)

### INSTRUCTION FOR PRE-SET PRESSURE

Press "R" button to choose the unit, press "+" or "-" button to increase or reduce the figure. Wait for seconds until the figure stop flashing. Open the switch to start inflate . The machine will stop automatically after the tire pressure reaches the pre-set pressure. After complete the inflation ,please turn off the switch.

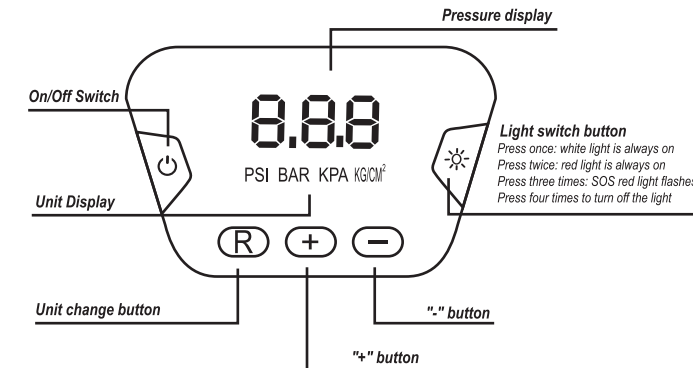

### THE RECOMMENDED TIRE PRESSURE FOR VEHICLES



**CAR**  
2.3-2.5KG/CM²



**SUV**  
2.5KG/CM²



**MPV**  
2.3-2.5KG/CM²

### WARRANTY CARD

User name		Telephone	
User address			
E-mail		QQ number	
Purchasing address		Agency	

### WARRANTY DESCRIPTION

- 1.This warranty card should be properly kept by the user as warranty certificate.
- 2.The warranty period is three months from the date of purchase . During the warranty period, due to product quality problems, users can contact our company or local dealers with the original or copy of invoice ,we will be responsible for "three guarantee".
- 3.Non-quality problems are not included in "three guarantee".